

INSTALLATION INSTRUCTIONS

Installation and Maintenance Manual Replacement Driver Assembly in Post Top Fixtures (LED)

WARNING:

Read these instructions carefully before attempting to install or maintain this product. Work must be done by qualified personnel. Improper installation or maintenance may result in personal injury or death or significant property damage.

INSTALLATION WARNING:

Be certain that all electrical power is disconnected from the fixture before installing or maintaining the fixture. Failure to do so may result in personal injury or death.

CAUTION:

Supply conductors that are run through the inside of a pole shall be supported by means capable of preventing injury and strain on the conductors.

In its ongoing commitment to continuous improvement, King Luminaire Inc. reserves the exclusive right to change materials and designs without notice.

*INSTALLATION INSTRUCTIONS:
REPLACEMENT DRIVER ASSEMBLY IN POST TOP FIXTURES*



Questions

If additional information is required, please contact:

King Luminaire Co. Inc.
Customer Service Department
1-800-268-7809
scgrp.com

Rev: April 23, 2025



INSTALLATION INSTRUCTIONS: REPLACEMENT DRIVER ASSEMBLY IN POST TOP FIXTURES



Installation Steps

1. Make sure power is disconnected from the fixture.
2. Rotate globe counter-clockwise to release it and then lift it. By doing so driver assembly which is attached to bottom of globe will be accessible.
3. Disconnect all the electrical connections of driver assembly from fixture.



INSTALLATION INSTRUCTIONS: REPLACEMENT DRIVER ASSEMBLY IN POST TOP FIXTURES



4. Unscrew the two Phillips head screws that fasten driver assembly to mounting plate and remove driver assembly.
5. Place new driver assembly in place of old one and screw it down with Phillips head screws. Attach electrical connections.
6. Place back globe on the fixture and rotate clockwise to lock the globe.

